

May 24, 2024

Updating INX 700 Series Microscope Software Using A USB Flash Drive

Materials


USB-C flash drive with one partition formatted exFAT, FAT16, or FAT32

INX 700 series probe microscope with Auto-Off time set to 10 minutes or longer

Procedure


1. Download the software bundle to a PC

File type = .zip
Do Not Unzip or Extract Files


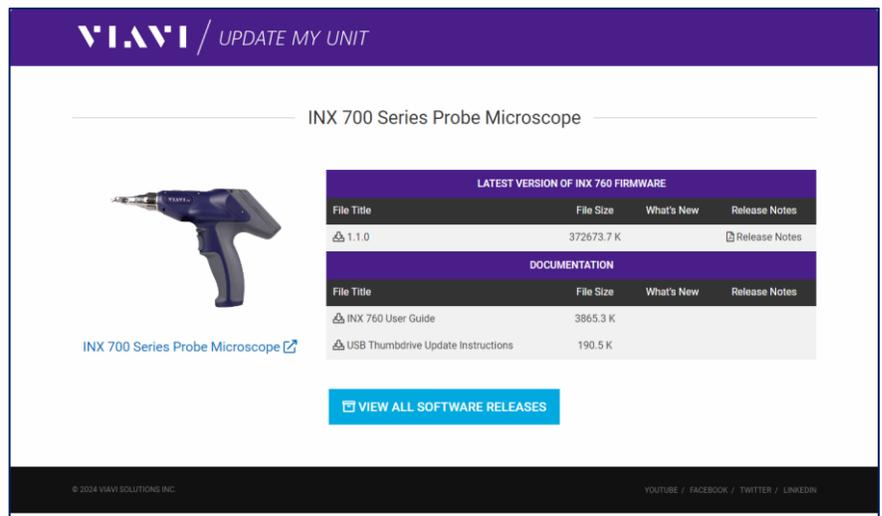


2. Copy the software from the PC to a USB flash drive

Do Not Unzip or Extract Files

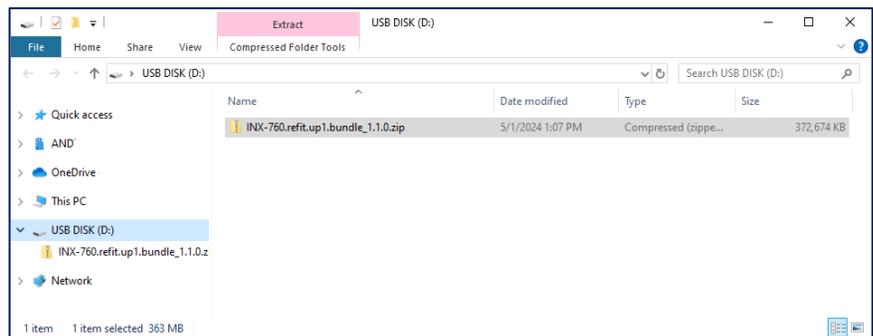

Updating INX 760 Software Using a USB Flash Drive
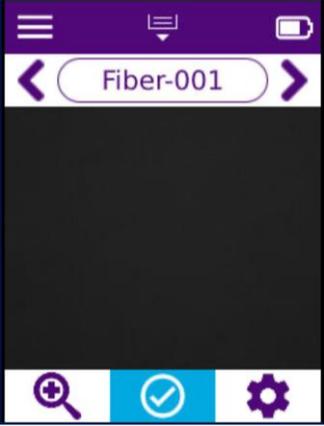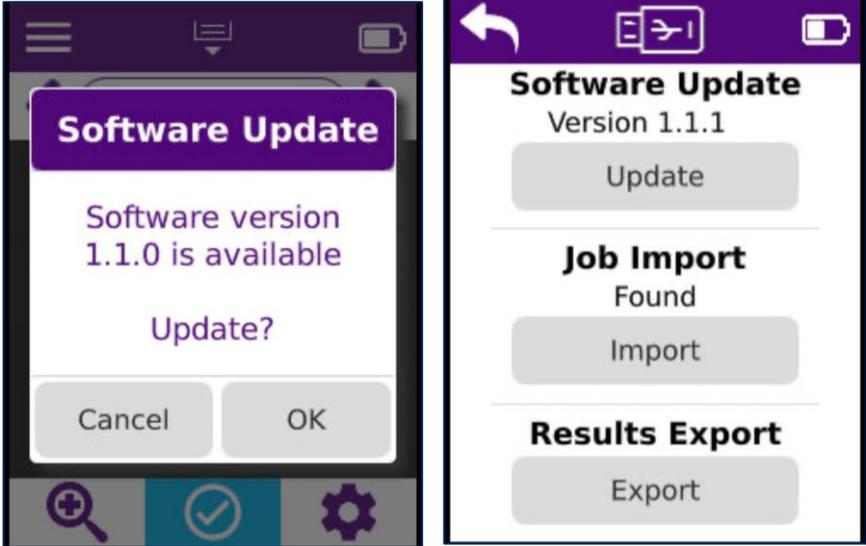
<p>3. Power on the INX 760 microscope</p>	
<p>4. Plug the USB drive into the microscope USB port</p>	
<p>5. Touch OK or Update when prompted</p> <div style="border: 1px solid red; border-radius: 10px; padding: 5px; margin-top: 10px;"> <p>Message will vary depending upon current software version</p> </div>	

<p>6. Wait for the upgrade process to complete</p> <p>The microscope will reboot automatically</p>	
<p>7. Unplug the USB drive from the microscope after the reboot</p> <p>Current software version is listed under System Info</p>	